



Tough Stuff Products, Inc.

Console Netz

READ ALL OF THE INSTRUCTIONS BEFORE STARTING
Check our website for any updated instructions! www.toughstuffproducts.com >>
Jeep® Accessories>>NETZ>>Console NETZ>>Installation Instructions.

TOOLS REQUIRED

Scissors

Tape


Drill with 3/32" drill bit

Phillips Screwdriver

INSTRUCTIONS

Cut template on dotted lines.

Tape the template in place as instructed on the template.

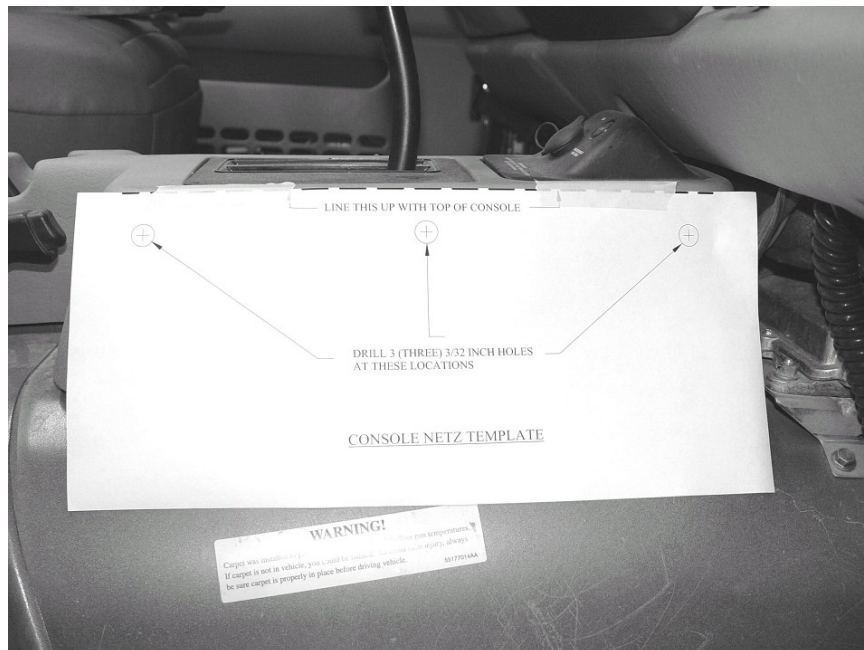

Drill through template in three (3) marked locations.

Remove template.

Screw 3 snaps into place with Phillips screwdriver. **DO NOT** over tighten, just snug them until the base is flat on the plastic.

Snap Console Netz into place.

Thank you for purchasing our product. We also manufacture many other body protection and accessory items for your vehicle, our complete product line can be viewed at www.toughstuffproducts.com.