



Tough Stuff Products, Inc.

Dash Netz

READ ALL OF THE INSTRUCTIONS BEFORE STARTING

Check our website for any updated instructions! www.toughstuffproducts.com >>
[Jeep® Accessories](#)>>[NETZ](#)>>[Dash NETZ](#)>>[Installation Instructions](#).

TOOLS REQUIRED

Scissors

Drill with 3/32" drill bit


Tape

Phillips Screwdriver

INSTRUCTIONS

Cut template on dotted lines.

Locate the 2 mold mark lines on the front corners of the dash bezel, to do this fold your mirror up and place your head under the mirror, then look down to find the mold mark lines.

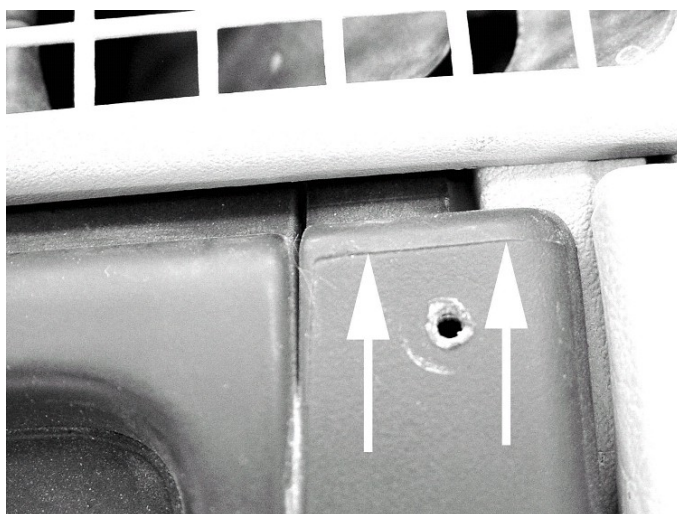


Tape template securely in place.

Drill through template in four (4) marked locations.

Remove template.

Screw 4 snaps into place with Phillips screwdriver. **DO NOT** over tighten, just snug them until the base is flat on the plastic.

Snap Dash Netz into place.

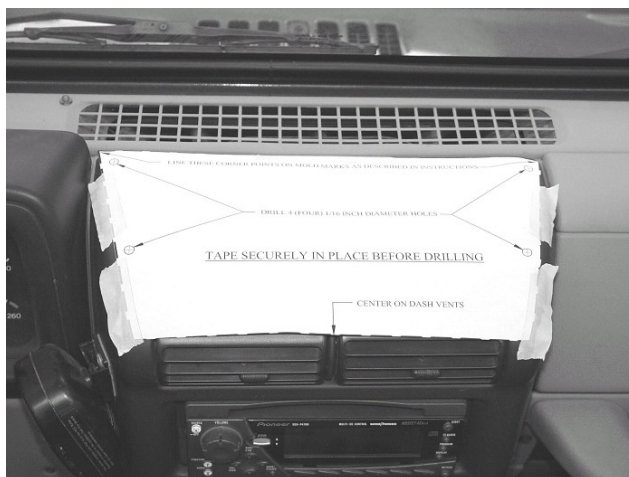

Thank you for purchasing our product. We also manufacture many other body protection and accessory items for your vehicle, our complete product line can be viewed at www.toughstuffproducts.com.